FORM MS–6587–4C–8/2002
REPLACES FORM MS–6587–3C–1/2001
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

Model Series

113400

TYPE NUMBERS
0035 through 0134.

For Use On Engines Built Before Date Code – 01083100

TABLE OF CONTENTS

Air Cleaner 8
Blower Housing/Shrouds 9
Cams 3
Carburetor 5
Controls 6
Controls 7
Crankcase Cover/Sump 2
Crankshaft 3
Cylinder 2
Electric Starter 10
Flywheel 9
Fuel Tank 6
Gear Reducer 10
Governor Spring 7
Head 4
Ignition 7
Kits/Gaskets – Carburetor 5
Kits/Gaskets – Engine 2
Kits/Gaskets – Valve 4
Muffler 8
Oil Group 10
Piston Group 3
Rewind 9
Valves 4

PRINTED IN U.S.A.

COPYRIGHT © by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

113400

1019 LABEL KIT

1058 OWNER"S MANUAL

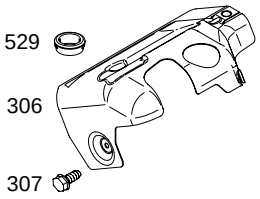

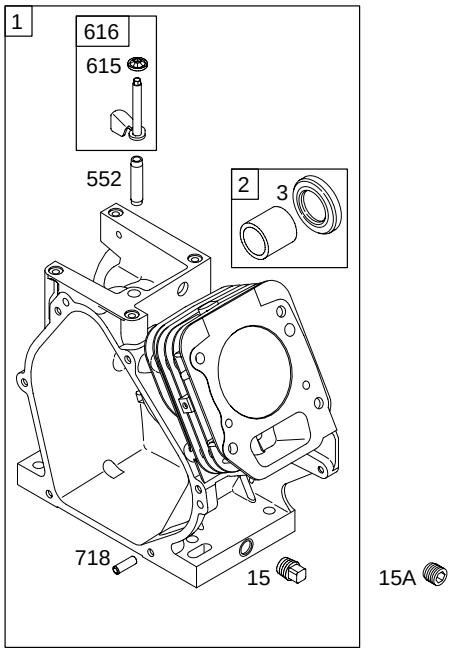

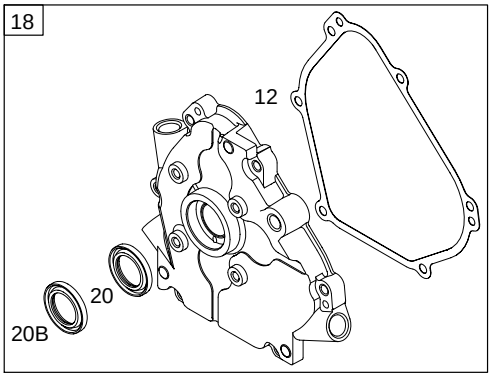

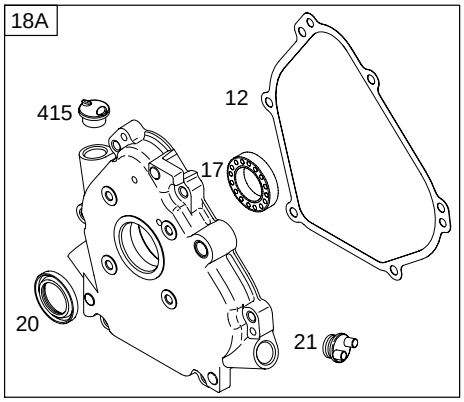

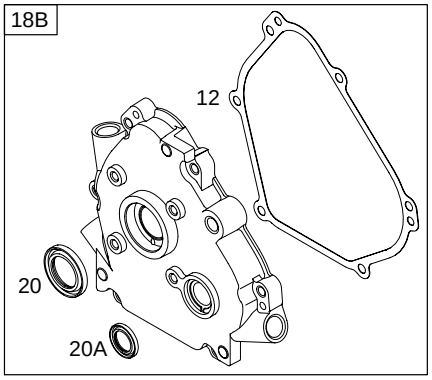

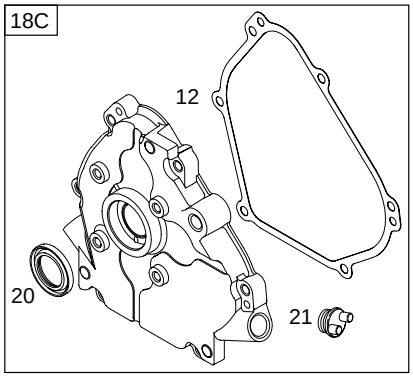

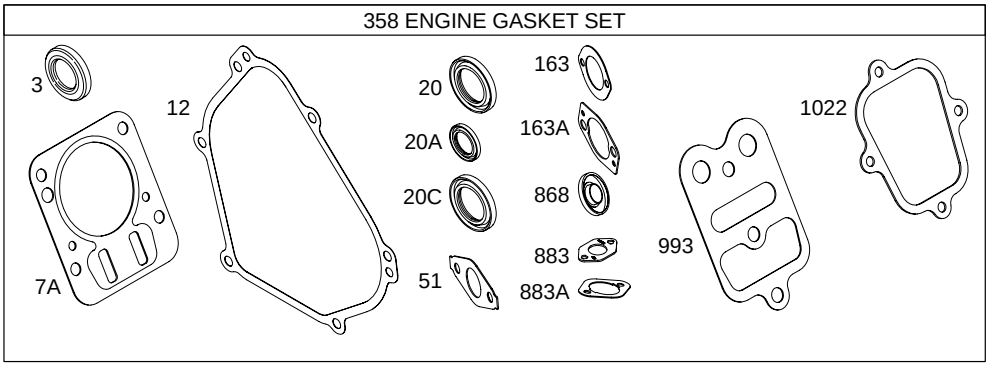

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

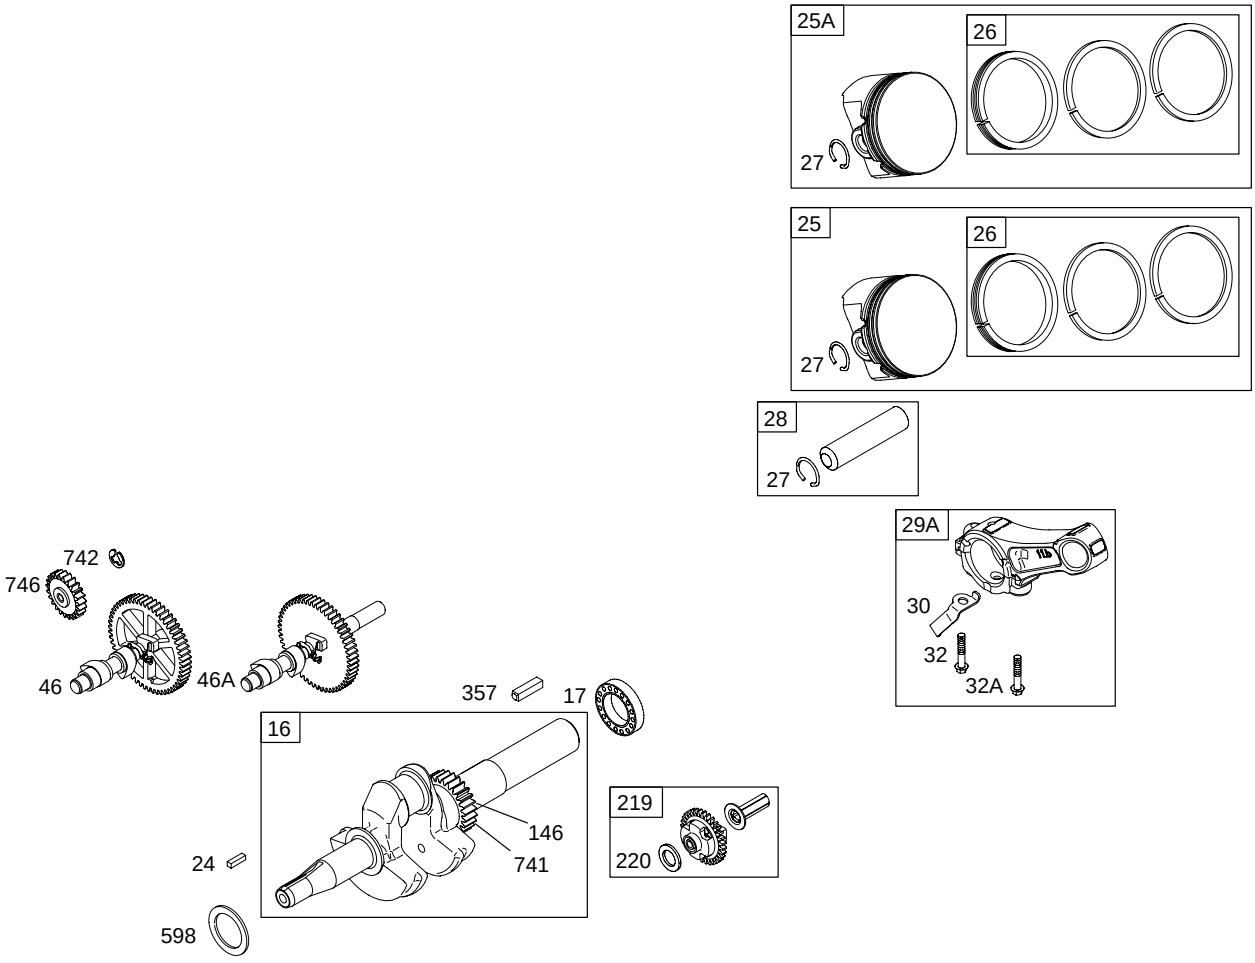

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

113400

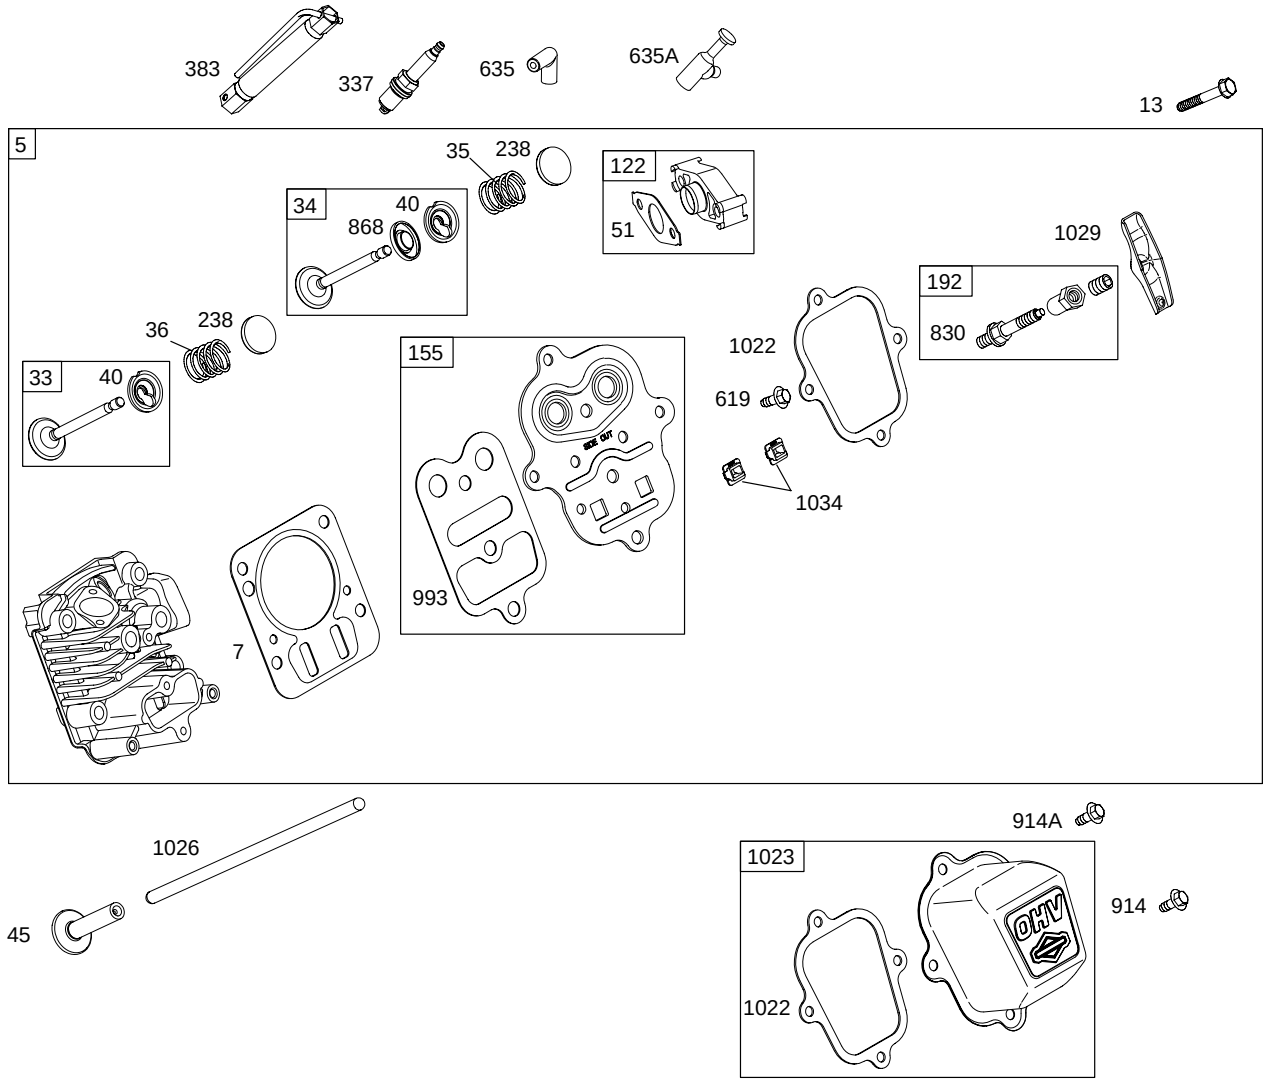

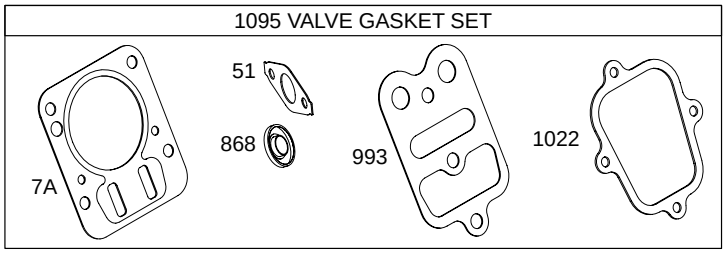

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

NOTE: ***This Illustration Represents A Number Of Different Carburetors. Parts Shown May Not Be Included In All Kits***

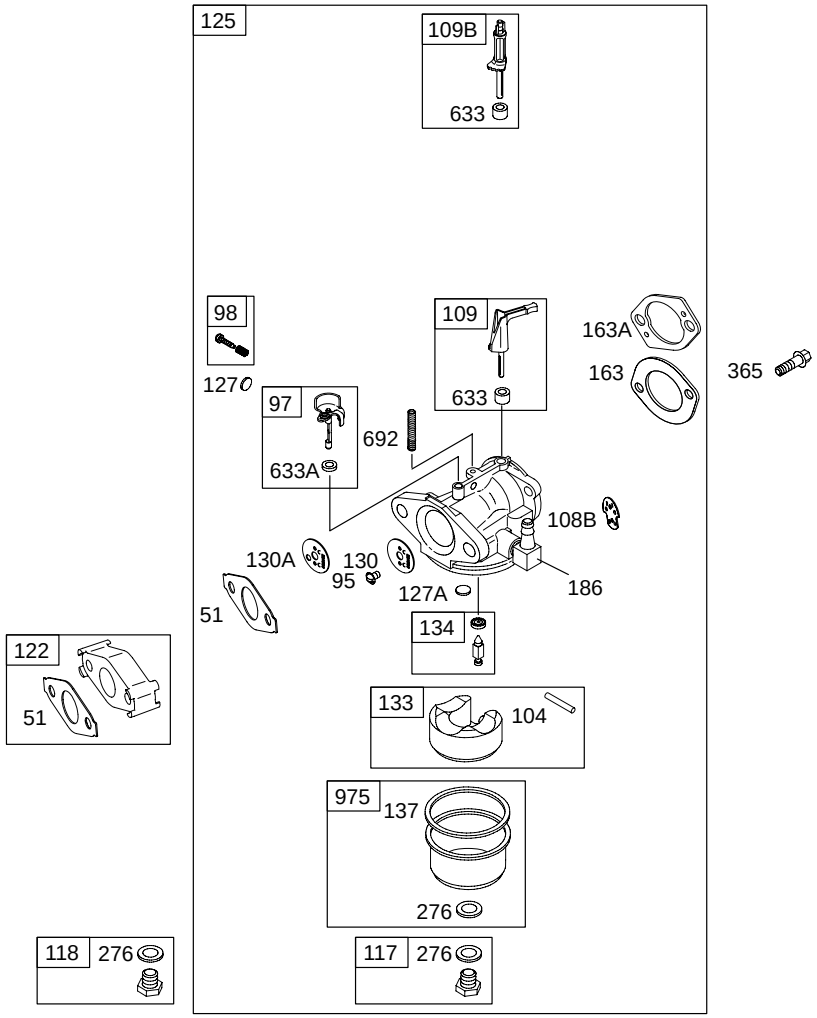

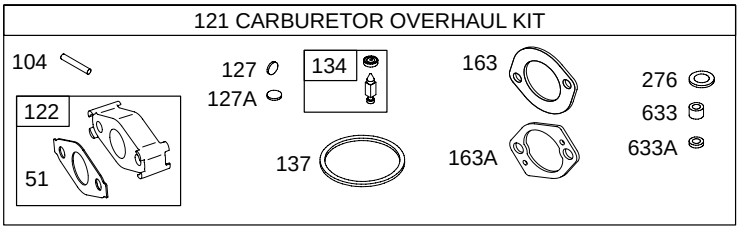

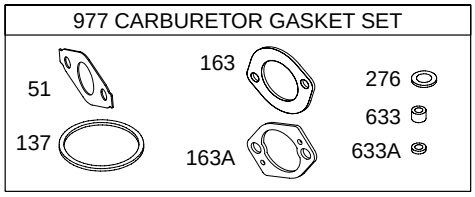

113400

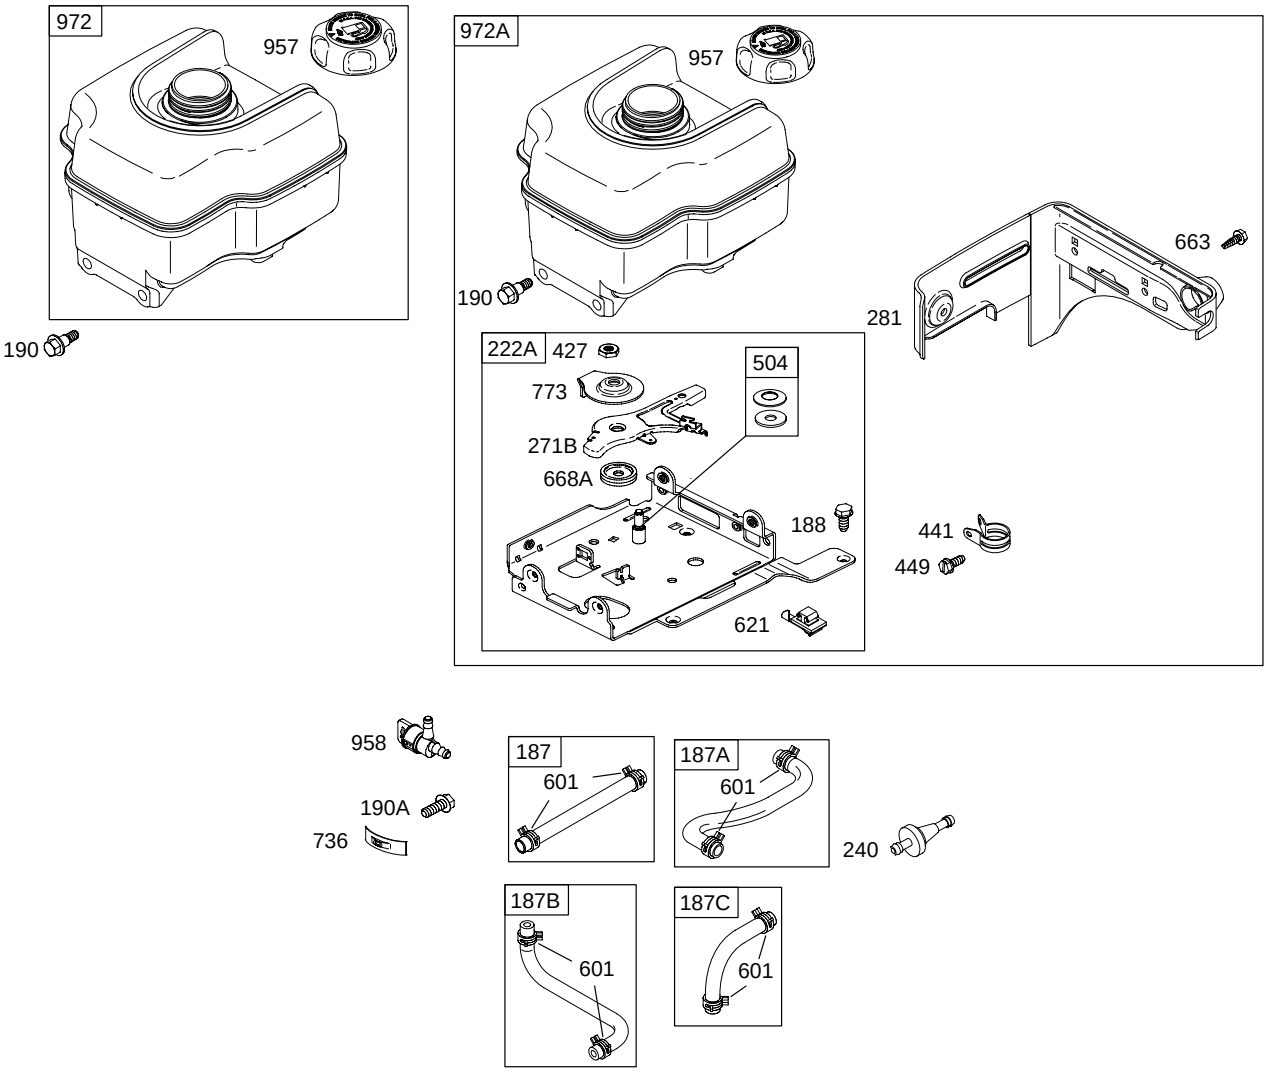

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

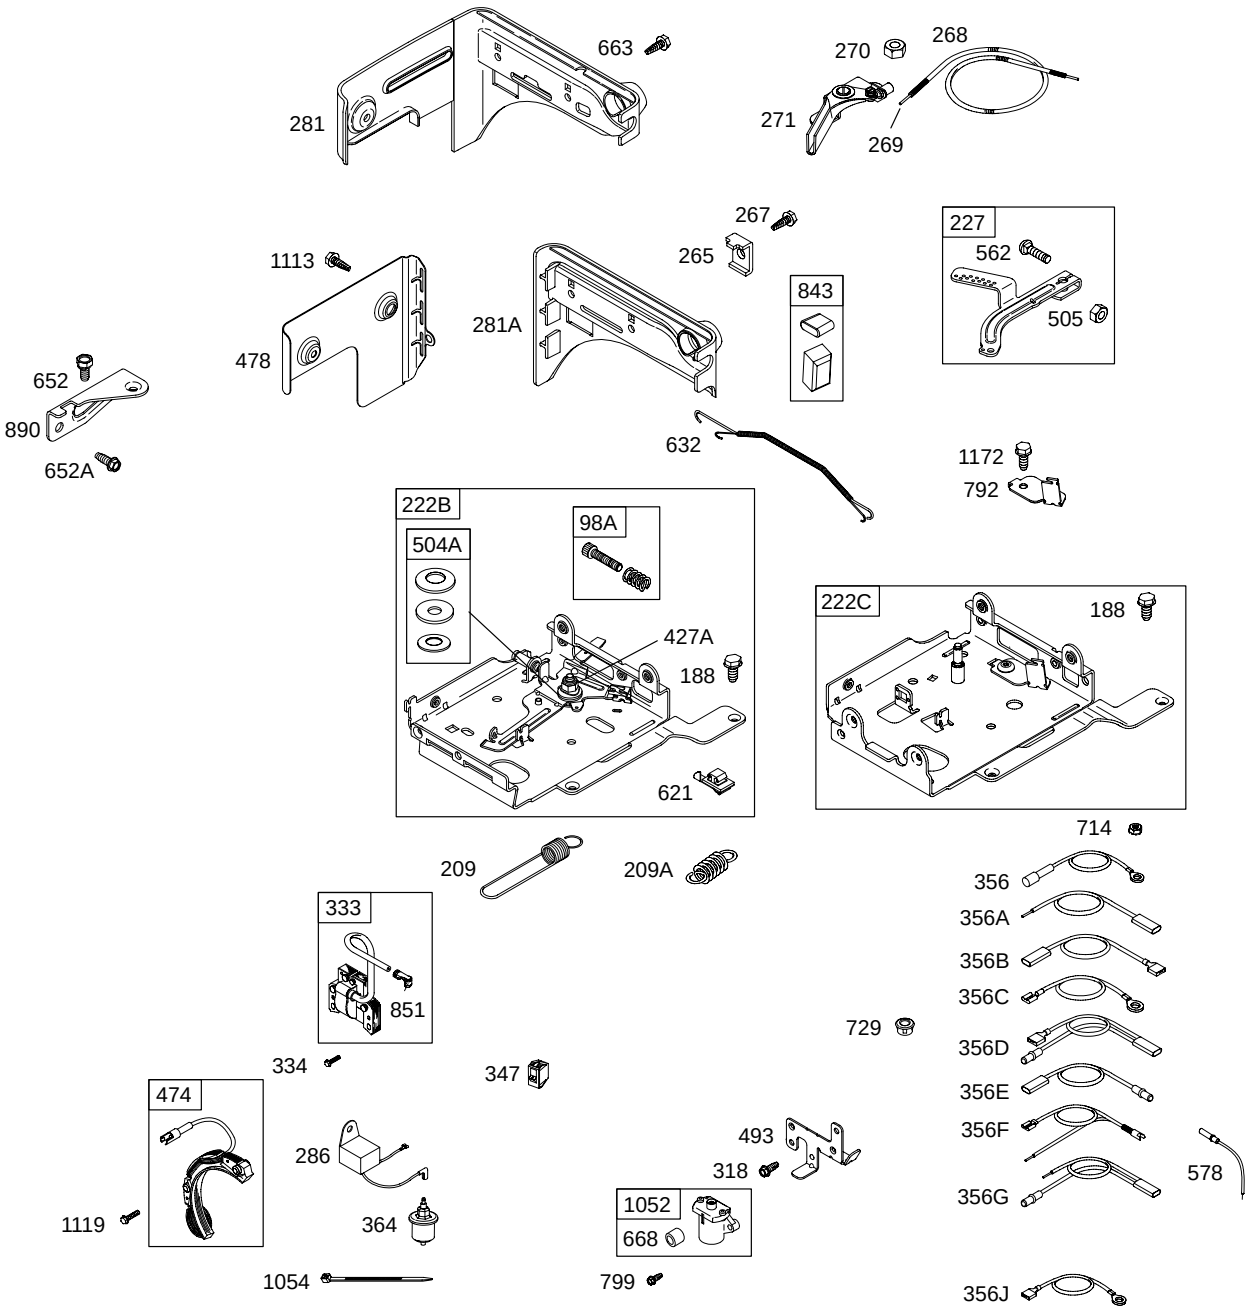

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

113400

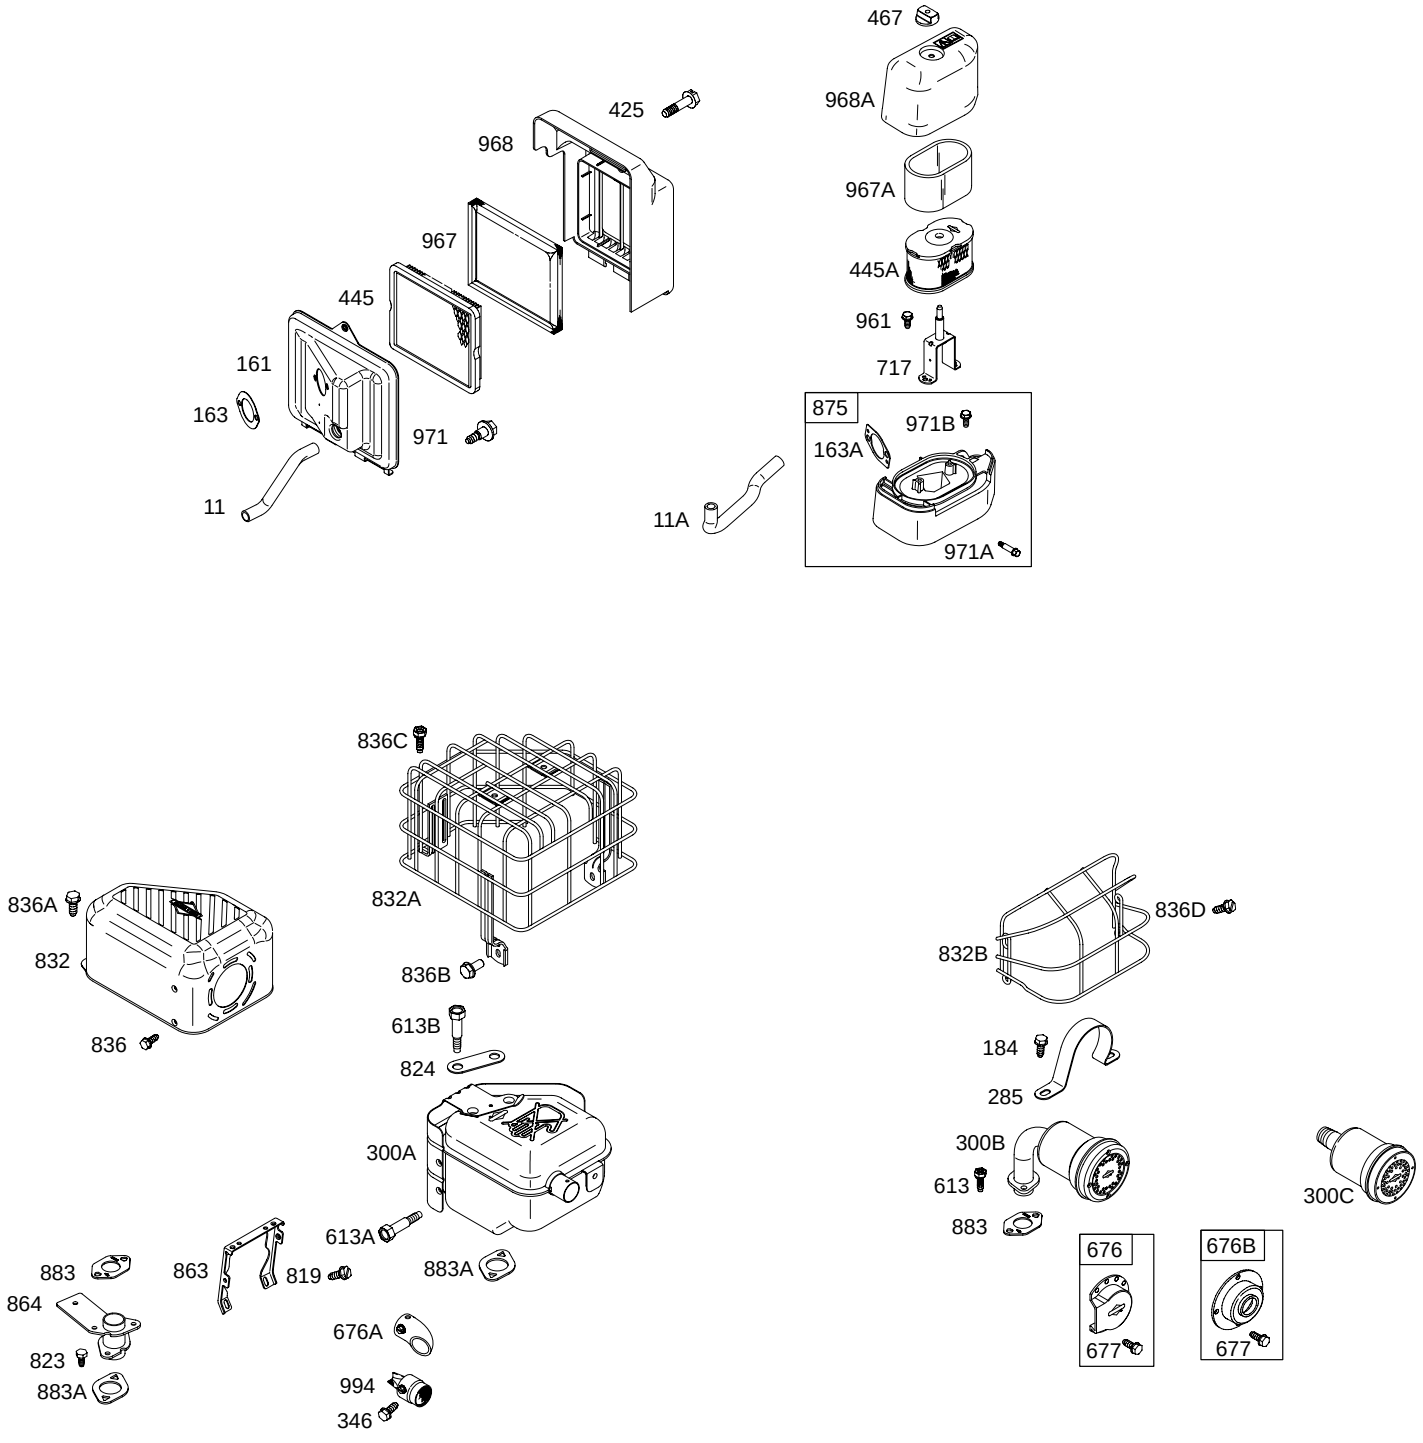

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

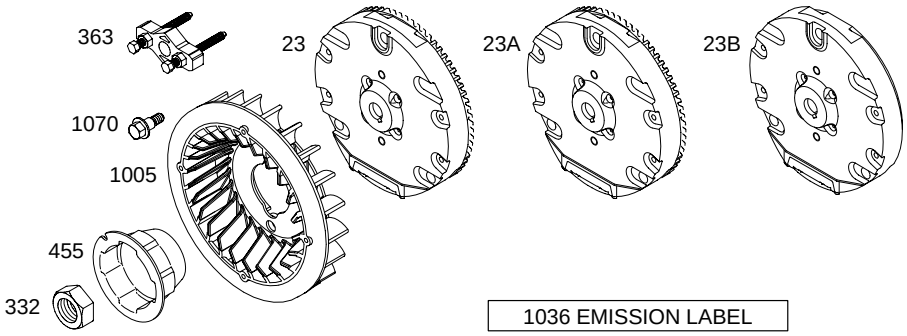
363
23
23A
23B
1070
1005
455
332
1036 EMISSION LABEL

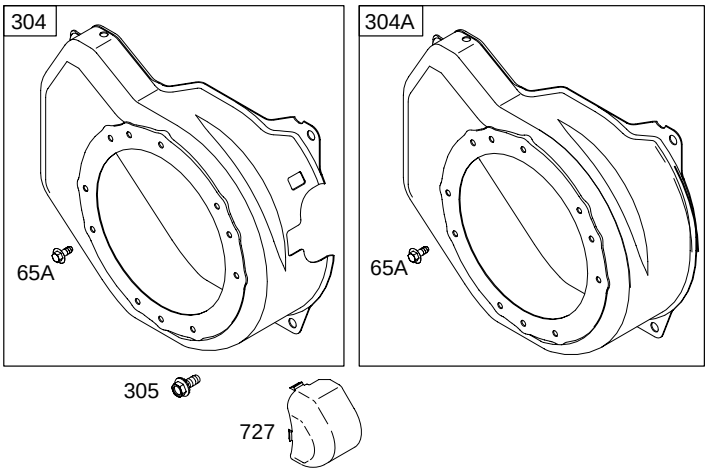
304
304A
65A
65A
305
727

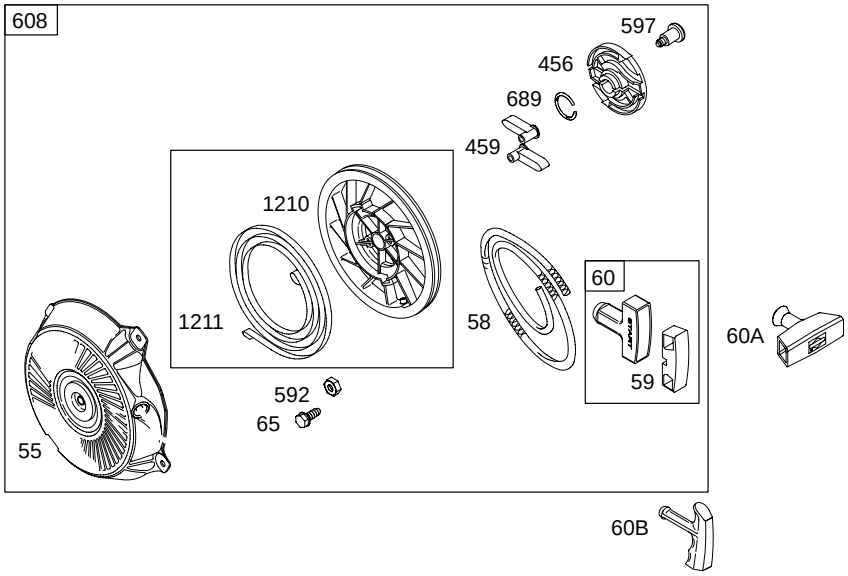
608
597
456
689
459
1210
1211
58
60
59
60A
592
65
55
60B

113400

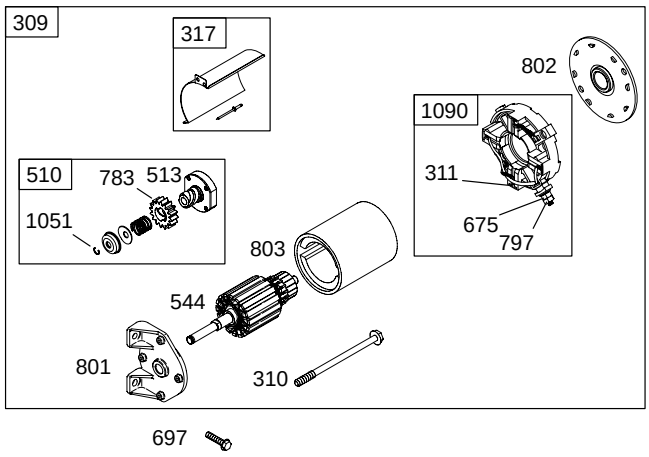
309
317
802
1090
311
675
797
510
783
513
1051
803
544
801
310
697

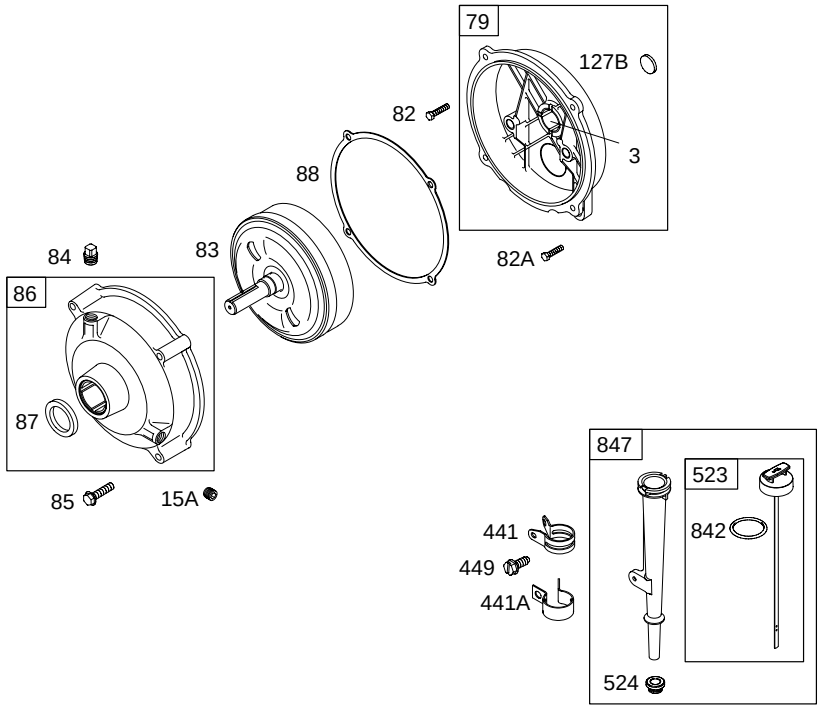
79
127B
82
3
88
84
83
82A
86
87
85
15A
847
523
441
842
449
441A
524

REF. NO.	PART NO.	DESCRIPTION
1	690045	Cylinder Assembly
		–––––– Note –––––
		696253 Cylinder Assembly Used on Type No(s). 0050.
2	399269	Kit–Bushing/Seal (Magneto Side)
3	★299819	Seal–Oil (Magneto Side)
5	693643	Head–Cylinder
7	698210	Gasket–Cylinder Head
11A	693647	Tube–Breather (High Mount Air Cleaner)
12	★692549	Gasket–Crankcase
13	691137	Screw (Cylinder Head)
15	691686	Plug–Oil Drain (Square Head)
15A	691682	Plug–Oil Drain (Hex Socket)
16	693802	Crankshaft
		–––––– Note –––––
		693796 Crankshaft Used on Type No(s). 0035.
		693803 Crankshaft Used on Type No(s). 0049.
		696227 Crankshaft Used on Type No(s). 0134.
17	692517	Bearing–Ball
18	693204	Cover–Crankcase Used on Type No(s). 0049.
18A	690047	Cover–Crankcase
20	★692550	Seal–Oil (PTO Side)
20B	★694171	Seal–Oil (PTO Side)
21	281658	Cap–Oil Fill
22	692551	Screw (Crankcase Cover/Sump)
23	694902	Flywheel (Electric Start)
23B	692987	Flywheel (Rewind Start)
24	222698	Key–Flywheel
25	499627	Piston Assembly (Standard)
		–––––– Note –––––
		692788 Piston Assembly (.010” Oversize)
		692789 Piston Assembly (.020” Oversize)
		692790 Piston Assembly (.030” Oversize)
26	499631	Ring Set (Standard)
		–––––– Note –––––
		692785 Ring Set (.010” Oversize)
		692786 Ring Set (.020” Oversize)
		692787 Ring Set (.030” Oversize)
27	691866	Lock–Piston Pin
28	499423	Pin–Piston
29A	499424	Rod–Connecting
30	692562	Dipper–Connecting Rod
32	691664	Screw (Connecting Rod)
32A	695759	Screw (Connecting Rod) (Used After Code Date 00022000).
33	499642	Valve–Exhaust
34	499641	Valve–Intake
35	691304	Spring–Valve (Intake)
36	691304	Spring–Valve (Exhaust)
40	692194	Retainer–Valve
45	690977	Tappet–Valve
46	693404	Camshaft
51	★◆●∅692555	Gasket–Intake
55	691422	Housing–Rewind Starter
58	693389	Rope–Starter (Cut To Required Length)
59	805957	Insert–Grip
60	715257	Grip–Starter Rope (2 Piece)
65	690837	Screw (Rewind Starter)
65A	692608	Screw (Rewind Starter)
79	694511	Case–Gear Reduction
82	690369	Screw (Gear Reduction Case)
82A	691122	Screw (Gear Reduction Case)
83	690374	Shaft–Auxiliary Drive
84	691121	Plug–Breather (Gear Reduction)
85	692551	Screw (Gear Cover To Gear Reduction Case)
86	690608	Cover–Gear
87	691582	Seal–Gear Reduction
88	691600	Gasket–Gear Reduction Cover
95	691636	Screw (Throttle Valve)
97	690024	Shaft–Throttle
98	398185	Kit–Idle Speed (Carburetor)
104	●691242	Pin–Float Hinge
108B	692567	Valve–Choke
109B	693628	Shaft–Choke (No Handle)
117	694975	Jet–Main (Standard)
		–––––– Note –––––
		498976 Jet–Main (Standard) Used on Type No(s). 0134.
118	694250	Jet–Main (High Altitude)
		–––––– Note –––––
		694975 Jet–Main (High Altitude) Used on Type No(s). 0134.
121	695157	Kit–Carburetor Overhaul
122	●693749	Spacer–Carburetor
125	696115	Carburetor
		–––––– Note –––––
		694928 Carburetor Used on Type No(s). 0134.
127	●691739	Plug–Welch (5/16” Diameter)
127A	●694468	Plug–Welch (3/8” Diameter)
127B	691585	Plug–Welch (7/8” Diameter)

★ Included in Engine Gasket Set–Ref. No. 358.
● Included in Carburetor Overhaul Kit Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

113400

REF. NO.	PART NO.	DESCRIPTION
130	**691181**	Valve–Throttle
133	**398187**	Float–Carburetor
134	●**398188**	Kit–Needle/Seat
137	●◆**693981**	Gasket–Float Bowl
146	**690979**	Key–Timing
155	**698214**	Plate–Cylinder Head
163A	⋆◆●**693458**	Gasket–Air Cleaner (High Mount)
186	**692317**	Connector–Hose
187	**691050**	Line–Fuel (Straight) (Cut to Required Length)
187C	**694486**	Line–Fuel (Molded)
188	**690877**	Screw (Control Bracket)
190	**692127**	Screw (Fuel Tank)
192	**694543**	Adjuster–Rocker Arm
209	**692571**	Spring–Governor (Silver) **–––––– Note ––––– 693206** Spring–Governor (Yellow) Used on Type No(s). 0035, 0117, 0134. **693710** Spring Governor (Black) Used on Type No(s). 0132
209A	**691278**	Spring–Governor (Platinum)
219	**693578**	Gear–Governor
220	**691724**	Washer (Governor Gear)
222A	**694253**	Bracket–Control
227	**692573**	Lever–Governor Control
238	**691300**	Cap–Valve
240	**694485**	Filter–Fuel
265	**691024**	Clamp–Casing
267	**692577**	Screw (Casing Clamp)
268	**691025**	Casing–Control Wire (Cut to Required Length)
269	**691026**	Wire–Control (Cut to Required Length)
270	**691027**	Nut (Control Wire Casing)
271	**691028**	Lever–Control
271B	**694256**	Lever–Control
276	●◆**271716**	Washer–Sealing (Main Jet)
281	**694252**	Panel–Control
286	**697939**	Module–Oil Sensor
286A	**697939**	Module–Oil Sensor
300A	**694429**	Muffler (Super Lo Tone)
304	**695299**	Housing–Blower (Electric Starter) (Red)
304A	**693621**	Housing–Blower (Rewind Starter) (Black)
305	**690960**	Screw (Blower Housing)
306	**693610**	Shield–Cylinder
307	**690345**	Screw (Cylinder Shield
309	**694504**	Motor–Starter
310	**690323**	Bolt (Starter Motor)
311	**497608**	Brush Set
317	**695494**	Cover–Starter
318	**693609**	Screw (Mounting Bracket)
332	**690662**	Nut (Flywheel)
333	**695711**	Armature–Magneto
334	**691061**	Screw (Magneto Armature)
337	**491055**	Plug–Spark **–––––– Note ––––– 691043** Plug–Spark Used on Type No(s). 0105.
347	**697854**	Switch–Rocker
356	**693650**	Wire–Stop (1 Wire, 6–1/4”Long) (Ring Terminal, And Push–On Insulated Pin Socket)
356A	**692390**	Stop Wire (1 Wire, 17” Long) (Snap Connect Insulated Female Blade Terminal, And Bare Wire End)
356B	**692602**	Stop Wire (1 Wire, 14” Long) (Snap Connect Insulated Female Blade Terminal, And Insulated Push–On Female Blade Terminal)
356C	**695630**	Stop Wire (1 Wire, 6–1/2” Long) (Push–On Female Blade Terminal, And Ring Terminal)
356D	**693651**	Stop Wire (2 Wires, 14” And 10” Long)(Snap Connect Insulated Female Blade Terminal, Insulated Push–On Female Blade Terminal And Snap Connect Insulated Female Blade Terminal)
356J	**692603**	Wire–Stop (1 Wire 6–1/2” Long)(Push–On Insulated Female Blade Terminal, And Ring Terminal) Used on Type No(s). 0117.
357	**692191**	Key–Drive Pulley
358	**695155**	Gasket Set–Engine
363	**19069**	Flywheel Puller
364	**695693**	Terminal–Oil Plug
365	**692568**	Screw (Carburetor)
383	**19374**	Wrench–Spark Plug
415	**693463**	Plug (Crankcase Cover/ Sump)
427	**694255**	Nut (Control Bracket)
441	**694262**	Bracket–Oil Fill
445A	**697029**	Filter–Air Cleaner Cartridge (High Mount)
449	**691693**	Screw (Oil Fill Bracket)
455	**692591**	Cup–Flywheel
456	**692299**	Plate–Pawl Friction
459	**281505**	Pawl–Rachet
467	**691668**	Knob–Air Cleaner
474	**694457**	Alternator
493	**693599**	Bracket–Mounting (Oil Sensor)

⋆ Included in Engine Gasket Set–Ref. No. 358.
● Included in Carburetor Overhaul Kit Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION
504	694254	Washer Set–Friction (2 Piece)
505	691251	Nut (Governor Control Lever)
510	499308	Drive–Starter
513	692024	Drive–Clutch
523	693618	Dipstick
524	281370	Seal–Dipstick Tube
529	692553	Grommet
544	692966	Armature–Starter
552	692346	Bushing–Governor Crank
562	94852	Bolt (Governor Control Lever)
592	690800	Nut (Rewind Starter)
597	691696	Screw (Pawl Friction Plate)
598	220624	Shim–End Play (Crankshaft)
601	95162	Clamp–Hose
608	693394	Starter–Rewind
613A	694460	Screw (Muffler)
613B	691108	Screw (Muffler)
615	692576	Retainer–Governor Shaft
616	692547	Crank–Governor
619	691108	Screw (Cylinder Head Plate)
621	692310	Switch–Stop
632	693408	Spring/Link–Mechanical Governor
633	●◆693867	Seal–Choke/Throttle Shaft (Choke)
633A	●◆691321	Seal–Choke/Throttle Shaft (Throttle)
635A	692927	Boot–Spark Plug (Handle Type)
652	691108	Screw (Support Bracket)
652A	695629	Screw (Support Bracket)
663	694593	Screw (Control Panel)
668	693604	Spacer (Oil Sensor)
668A	694257	Spacer (Control Bracket)
675	691261	Washer (Brush Retainer)
676A	696029	Deflector–Muffler
689	691855	Spring–Friction (Rewind Start)
692	690572	Spring–Detent
697	690372	Screw (Drive Cap)
714	693649	Nut (Oil Plug Terminal)
717	693462	Bracket–Air Cleaner
718	690959	Pin–Locatin
727	694467	Cover–Starter Drive
729	694371	Clip–Wire
741	695087	Gear–Timing
742	692564	Retainer–E Ring (Idler Gear)
746	692566	Gear–Idler
773	694258	Retainer (Control Bracket)
783	692353	Gear–Pinion
797	691029	Nut (Brush Retainer)
799	693609	Screw (Oil Sensor)
801	694482	Cap–Drive
802	691286	Cap–End
803	693757	Housing–Starter
819	691685	Screw (Muffler Bracket)
823	691665	Screw (Muffler Adapter)
824	696017	Gasket–Heat Shield
830	694544	Stud (Rocker Arm)
832A	694459	Guard–Muffler (Used Wth Super Lo Tone Muffler)
836B	691003	Screw (Muffler Guard)
836C	691665	Screw (Muffler Guard)
836D	696519	Screw (Muffler Guard)
842	691031	Seal–O Ring (Dipstick Tube)
843	694061	Sleeve–Lever
847	693617	Dipstick/Tube Assembly
851	493880	Terminal–Spark Plug
863	692596	Bracket–Muffler
864	694430	Adapter–Muffler
868	★∅692044	Seal–Valve
875	693459	Base–Air Cleaner (Plastic)(High Mount)
883	691893	Gasket–Exhaust (Between Adapter and Cylinder Head)
883A	697815	Gasket–Exhaust
890	694933	Bracket–Support
914	692198	Screw (Rocker Cover)
914A	692557	Screw (Rocker Cover)
957	694261	Cap–Fuel Tank
958	692586	Valve–Fuel Shut Off (Plastic)
961	693598	Screw (Air Cleaner Bracket)
967A	273356	Filter–Pre Cleaner (High Mount)
968A	693460	Cover–Air Cleaner (High Mount)
971A	690349	Screw (Fuel Tank)
971B	691693	Screw (Fuel Tank)
972	694260	Tank–Fuel
975	493640	Bowl–Float
977	695156	Gasket Set–Carburetor
993	★∅694088	Gasket–Cylinder Head Plate
1005	692592	Fan–Flywheel
1019	694851	Kit–Label
1022	★∅691890	Gasket–Rocker Cover
1023	499924	Cover–Rocker
1026	693517	Rod–Push
1029	691230	Arm–Rocker
1034	691343	Guide–Push Rod
1036	696766	Label–Emission (Used After Code Date 01072300). **–––––– Note ––––– 695041** Label–Emission (Used Before Code Date 01072400).
1051	691265	Ring–Retaining (Starter Drive)
1052	696954	Sensor–Oil
1054	280275	Tie–Cable
1058	275092	Owner's Manual
1070	692590	Screw (Flywheel Fan)
1090	691293	Retainer–Brush
1095	695289	Gasket Set–Valve
1119	691183	Screw (Alternator)
1210	498144	Pulley/Spring Assembly (Pulley)
1211	498144	Pulley/Spring Assembly (Spring)

★ Included in Engine Gasket Set–Ref. No. 358.
● Included in Carburetor Overhaul Kit Ref. No. 121.
◆ Included in Carburetor Gasket Set–Ref. No. 977.
∅ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.